


The AMX Touchpanel

Videoconferencing resources at
your fingertips!

The Main Screen



When you arrive in the room, the touchpanel will look like this (assuming the system is not already connected).

- Choose the location with which you wish to connect. Choose Multi-Point if you are connecting to both remote sites.
- If the system is already in a connection, choose any of the buttons to take you to the next screen.

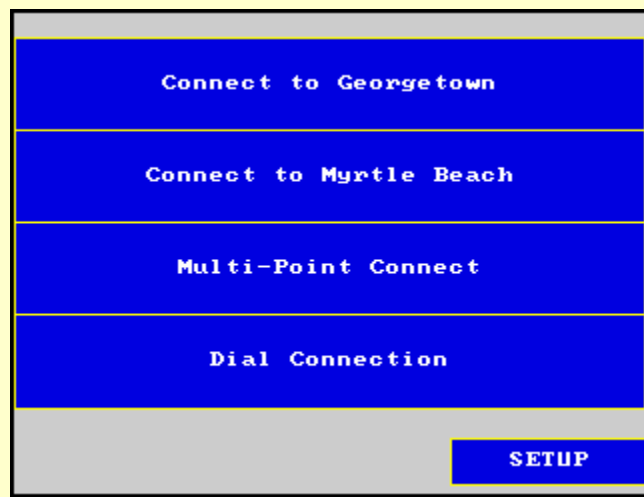


Selecting Your Location and Video Options

- Once you're in a connection, you will need to select a site for which you wish to control video sources (likely your local site). Notice these choices stay on the screen as you move to other menus.
- For each site you will see the options at the right. To choose the PC as a video source, you will still select the play button on the Visual Concert. If you choose the PC as a video source, your remote sites will still see the last selected local camera as well.

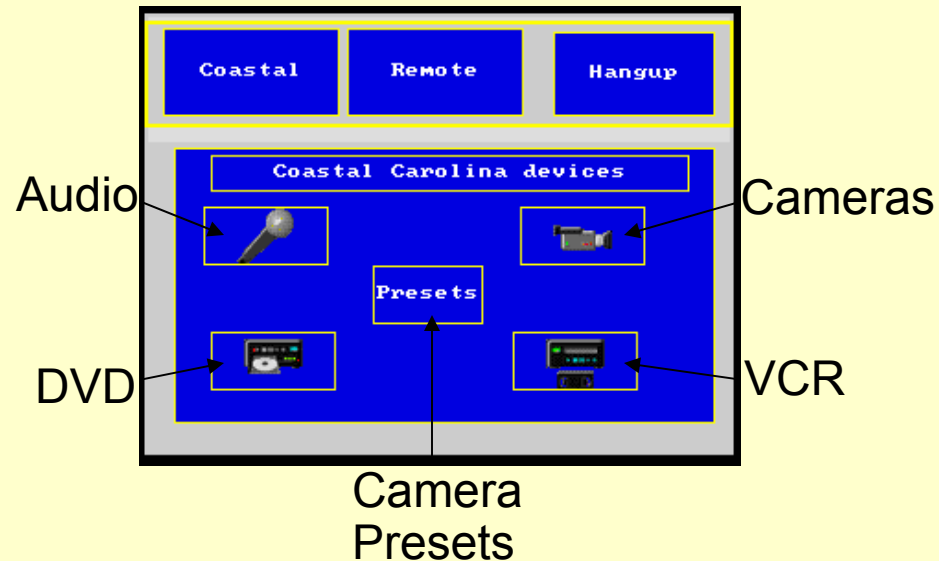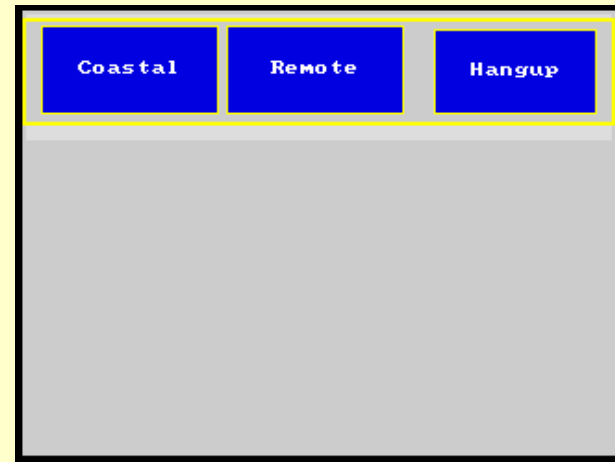


Audio Control

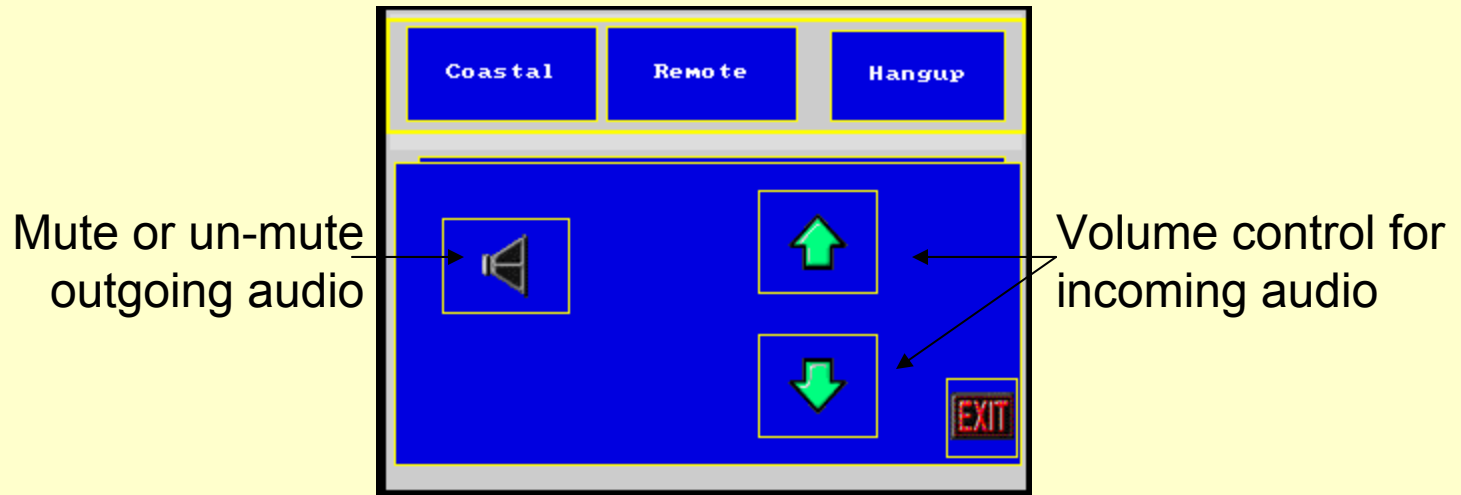

Camera Presets

- Presets have been programmed to allow you to quickly get to frequently used camera selections and angles. The two circles with “i”s inside indicate tight and wide shots of the instructors.
- Presets 1-7 are close-up shots of student desks. The student microphones are set to automatically track the student who has activated his/her microphone, thus you will rarely (if ever) need to use these student presets.


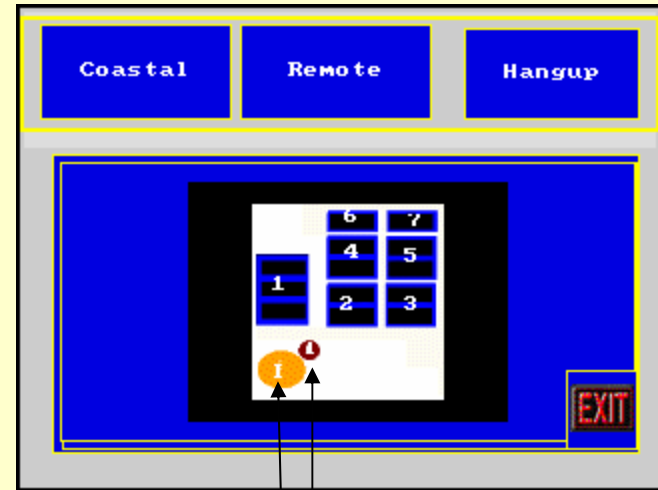


Tight shot of instructor
(instructor behind desk)


Wide shot of instructor
(instructor with board/
at front of room)

Camera Selection and Control

- You have the option to send one of three camera views to your remote site(s): Instructor, Student, and Documents (document camera).
- For each camera, you may pan, tilt, and zoom. With the document camera, you also have the option to control the light source (arm or base lighting) and the camera iris.

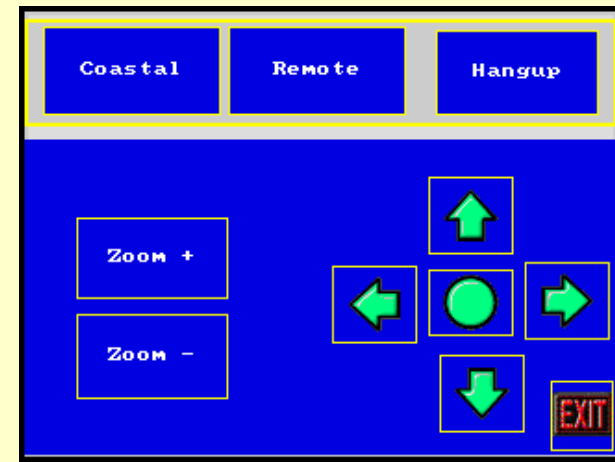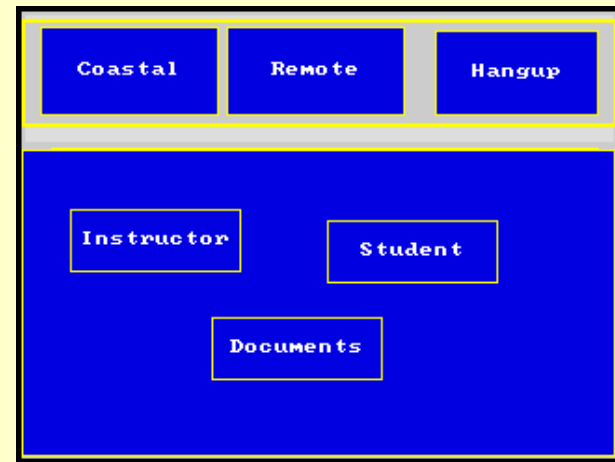

Document Camera Controls

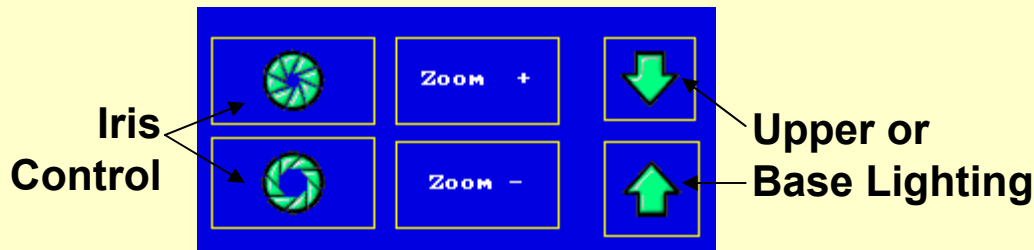

DVD and VCR Control

- For both the DVD and the VCR, you have the options to play, stop, pause, fast forward, and rewind. You also have the option to record, although recording of classes is set up on a separate VCR which must be operated manually.
- Inserting and ejecting DVD's may be initiated from the Open/Close button on the touchpad. Video tapes may be ejected from the touchpad.
- The DVD and VCR controls look identical on the touchpad, but must be selected separately from the video options screen (see slide 3).

DVD Control Menu



VCR Control Menu



Hangup and Exit

Each control screen has a Hangup and Exit option.

- Hangup takes you out of the call and back to the main touchpanel screen.
- Exit takes you back to the previous screen.

