



Ends call

Switches to near end camera control

Switches to far end camera control

Moves camera

Makes call

CAMERA PRESETS

UHAL 228/A

- 0-instructor
- 1-board
- 2-9-student desks

Georgetown

- 0-instructor

Displays main menu and backs out of sub-menus

TO DISPLAY

Document camera

Press Near twice, then 2

VCR/DVD

Press Near twice, then 3